

### To record a CD with the Roland CD-2

- Plug the CD-2 in and turn the power on. (both on back)
- If all is clear for the CD tray, insert a blank CD. (on the right)
- Press the MIC SELECT button until it turns green. (on the left)
- Press the MARKER button on the CD side. (on the right)
- Press the “Play/Pause” (▶/||) button to begin recording. (on the right)
- Press the “Play/Pause” (▶/||) button after each selection.
- Wait at least 4 seconds then press (▶/||) to begin recording another track.
- Press the “Stop” (■) button after the last selection.
- Press the FINALIZE button to finish the CD.
- Turn off the power and unplug the CD-2.

### To record a CD with the Roland CD-2

- Plug the CD-2 in and turn the power on. (both on back)
- If all is clear for the CD tray, insert a blank CD. (on the right)
- Press the MIC SELECT button until it turns green. (on the left)
- Press the MARKER button on the CD side. (on the right)
- Press the “Play/Pause” (▶/||) button to begin recording. (on the right)
- Press the “Play/Pause” (▶/||) button after each selection.
- Wait at least 4 seconds then press (▶/||) to begin recording another track.
- Press the “Stop” (■) button after the last selection.
- Press the FINALIZE button to finish the CD.
- Turn off the power and unplug the CD-2.